

Hall Technologies • 1234 Lakeshore Dr Suite #150 Coppell, TX 75019 • halltechav.com

## AMP-7040

40W Audio Amplifier

## **Command List**

March 14, 2024













Hall Technologies March 14, 2024 Page 1 of 6

# **COMMAND LIST TABLE OF CONTENTS**

Serial Control List	3
RS-232	2
IR Remote	5

### **Control List**

#### **RS-232**

Baud rate: 9600 Data bit: 8 bit Stop bit: 1 bit Parity: No

Commands terminated with "." or "%". (Do not append carriage returns to the commands)

Note: The AMP-7040 has a 16 position selector switch used to identify units connected in a RS-485 configuration. Prefixing the command with "ID#/" is required where ID# is the selector switch setting, 1 thru F. No command prefix is required when the selector switch setting is 0.

Command	Response	Description	
1A1.	A: 1->1	Switching the audio to input 1	
2A1.	A: 2->1	Switching the audio to input 2	
3A1.	A: 3->1	Switching the audio to input 3	
0A0.	Mute	Mute microphone and audio output	
1A0.	Mute MIC	Mute microphone audio	
2A0.	Mute LIN	Mute line audio	
0A1.	Unmute	Unmute audio	
3A0.	Gate On	Switch on squelch	
4A0.	Gate Off	Switch off squelch	
600%	A: 1->1 Volume of MIC: 30 Bass of LINE: 00 Treble of LINE: 00 Ducking Off	Check the current amplifier status	
601%	Volume of MIC: 51	Increases microphone level	
602%	Volume of MIC: 51	Decreases microphone level	
603%	Volume of LINE: 51	Increases line level audio	
604%	Volume of LINE: 51	Decreases line level audio	
605%	Bass of LINE: 04	Increases bass level on the line level inputs	

Hall Technologies March 14, 2024 Page 3 of 6

Command	Response	Description	
606%	Bass of LINE: 04	Decreases bass level on the line level inputs	
607%	Treble of LINE: 04	Increases the treble level on the line level inputs	
608%	Treble of LINE: 04	Decreases the treble level on the line level inputs	
609%	Init OK	Restores settings to the factory default	
610%	Ducking off Ducking on	Enables/disables the ducking function	
4[xx]%	Ducking of LINE: 50	Directly sets ducking level. [xx] range: 00 to 60	
5[xx]%	Volume of MIC: 50	Directly sets the MIC level. [xx] range: 00 to 60	
7[xx]%	Volume of LINE: 50	Directly sets the Line level. [xx] range: 00 to 60	
8[xx]%	Bass of LINE: 04	Directly sets the Bass level. [xx] range: 00 to 08	
9[xx]%	Treble of LINE: 04	Directly sets the Treble level. [xx] range: 00 to 08	

#### RS-232 Control Notes:

- 1. The letter inside the bracket [] is the variable code, which is changeable.
- 2. The bracket [] is not included in the RS-232 commands.
- 3. Any dot "." After the letters is part of the commands.
- 4. Ducking function: when there is an input on MIC, the volume of the line audio will be automatically turned down to the preset volume level. If there is no signal detected on MIC after 5 seconds, the volume will automatically increase to the original setting. If you need to enable/disable the ducking function, send the command "610%" (same command toggles ducking on/off).
- 5. **ID Coding:** the ID codes of the AMP-7040 ranges from 0 to F (hexadecimal). If the address of the ID code is 0, any RS-232 command is available. If the address is 1~F it has a unique ID code that is needed to be added to the front of the RS-232 command. For example, if the ID code is 5 and the desired RS-232 command is "**604**%", the correct command should be "**5/604**%". (There is no need to add "ID/" before the command if the ID code is 0.)

#### **Examples:**

- 1. Switching the input 2 to the line out: **2A1**
- 2. Turning up the volume of line audio: 603%
- 3. Preset the MIC volume to 21: 521%
- 4. Check the working status of the AMP-7040: 600%
- 5. Turn up MIC volume with product ID code set to 2: 2/601%

Hall Technologies March 14, 2024 Page 4 of 6

# IR REMOTE CONTROL (SOLD SEPARATELY)

#### **NEC Extended Protocol**

Key	Device	Sub-Device	OBC
Input Select 1	0x40	0xFF	0x04
Input Select 2	0x40	0xFF	0x46
Input Select 3	0x40	0xFF	
Mic Mute	0x40	0xFF	0x02
Speaker Mute	0x40	0xFF	0x03
Line Mute	0x40	0xFF	0x44
Mic Vol +	0x40	0xFF	0x48
Mic Vol -	0x40	0xFF	0x5C
Line Vol +	0x40	0xFF	0x1B
Line Vol -	0x40	0xFF	0x5A
Bass +	0x40	0xFF	0x58
Bass -	0x40	0xFF	0x59
Treble +	0x40	0xFF	0x15
Treble -	0x40	0xFF	0x54

Hall Technologies March 14, 2024 Page 5 of 6



© Copyright 2024. Hall Technologies All rights reserved.

1234 Lakeshore Drive, Coppell, TX 75019 halltechav.com / support@halltechav.com (714)641-6607

Hall Technologies March 14, 2024 Page 6 of 6