


## HT-TRK1 Upgrade Instructions

To upgrade the firmware, first make sure the entire kit is connected and the HT-TRK receiver is connected via network cable. Access the Web UI and go to the “FIRMWARE UPGRADE” tab.

### ARM UPGRADE

Select ARM Upgrade, click Browse, and select the file called “**MstarUpgrade.bin**”. (This file needs to be unzipped if inside a zipped file.) Dots will spin while the upgrade path is in place and ready. Once ready, click “Upgrade” to perform the update. The device will take around 8 minutes to do the full ARM upgrade.

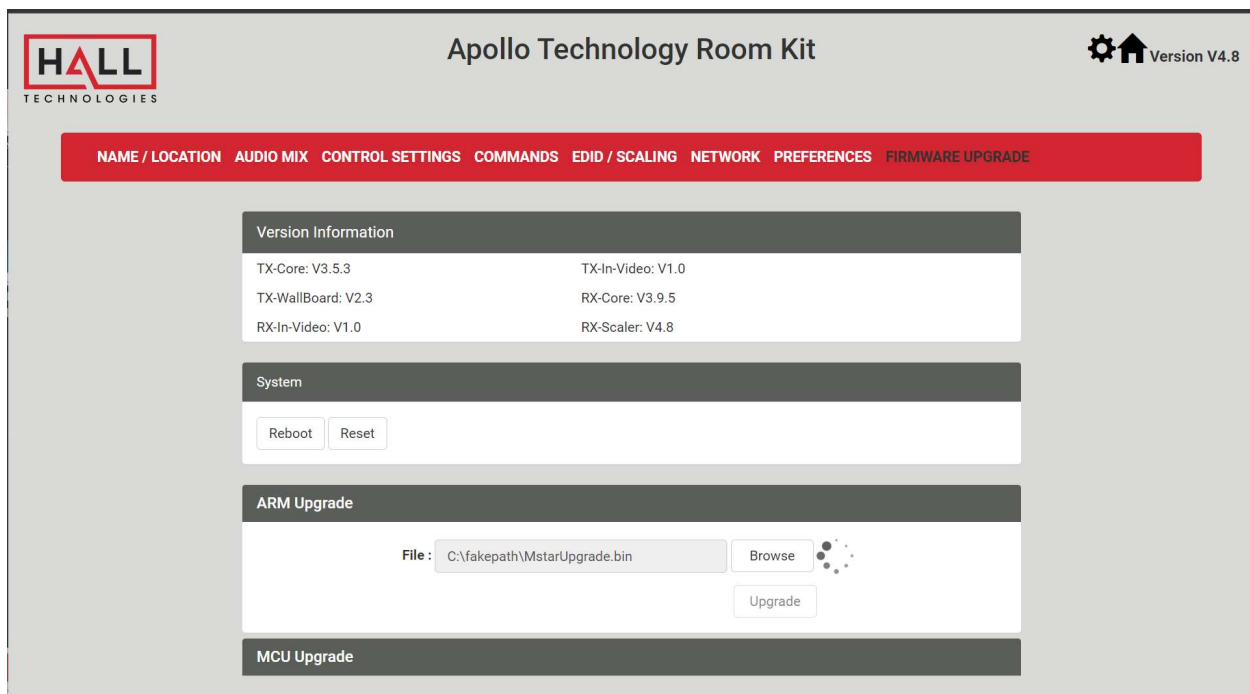


### MCU UPGRADE

After the device has completed the ARM upgrade, access the Web UI again and return to the Firmware Upgrade tab. Click on MCU Upgrade and search for the “**McuUpdate.zip**” file. This must remain as a zip file and cannot be renamed or it will not properly load. When loading a progress bar will appear, providing status of the upgrade. This will be completed in approximately 5 minutes.



Again, dots will spin while the upgrade path is in place and ready. Once ready, click “Upgrade” to perform the update. A progress bar will show the status of the update. Multiple files will be transmitted during this step.

**MCU5** is the final one to be upgraded. Once this is 100%, click on the “X” to close the pop-up, and then click to reboot the device.

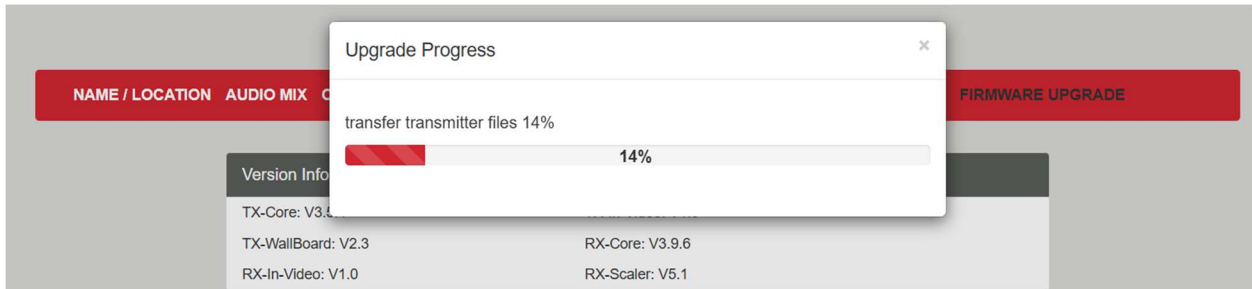

When the unit is properly upgraded to V5.1, your device should look like this:

